

# MDT Series Temperature Controller

## User Quick Start Manual

MDT-01R-R MDT-01T-R

MDT-01R-T MDT-01T-T

MDT-02R-R MDT-02T-R

MDT-02R-T MDT-02T-T

○

### 3. Installation

#### 3.1 Ambient temperature


#### 3.2 Installation site

☒ ☒


#### 3.3 Installation method

## Appearance and Part Name

### 1.1 Appearance and terminal

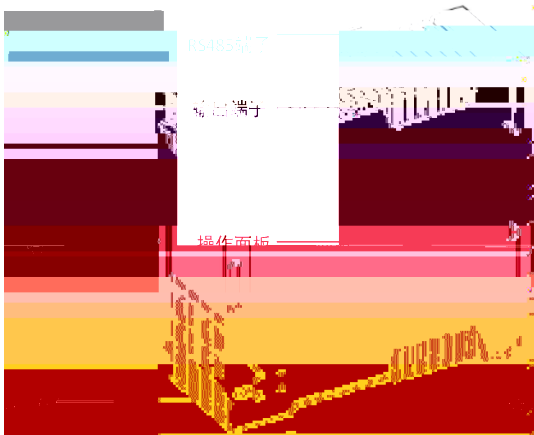


### 2. Model

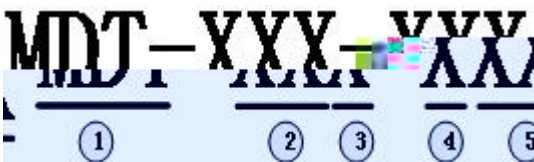

‡

- 
- 
- 
- 

XXYR300

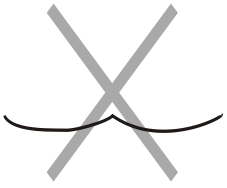


0	0	1	1	2	2	3	3	4	4
5	5	6	6	7	7	8	8	9	9


A	B	b	C	c	D	d	E
F	G	g	H	h	I	i	U
K	L	L	M	N	n	O	O
P	Q	q	R	r	S	S	t
U	V	u	Y	Y	Z	Z	-




MDT-01R-T

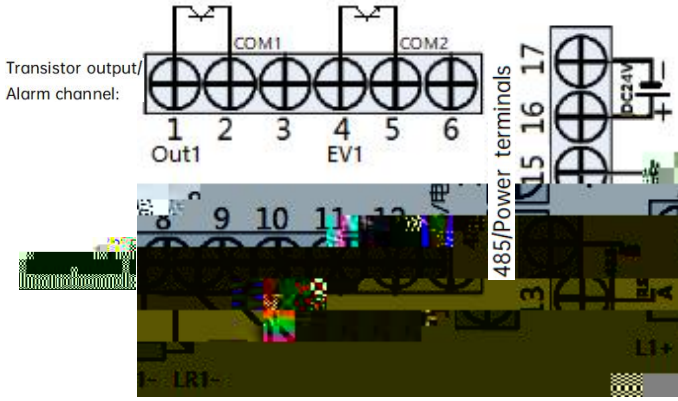


MDT-02R-T:

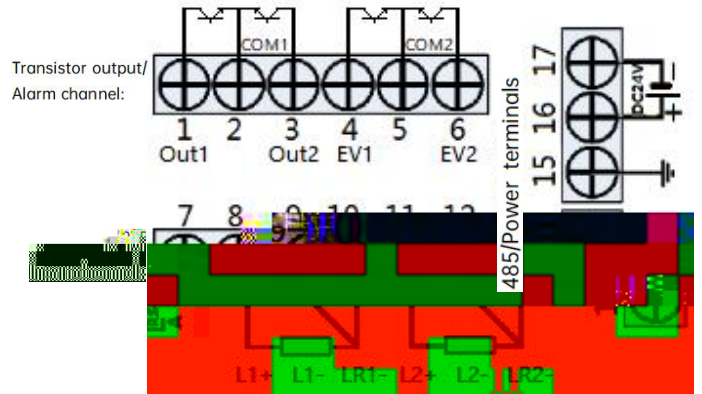


MDT-01T-T

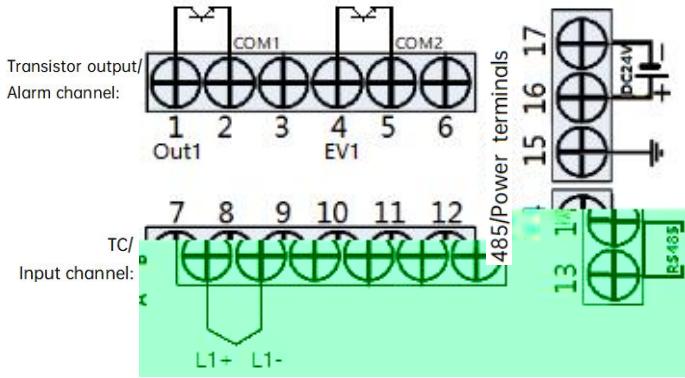

MDT-02T-T:

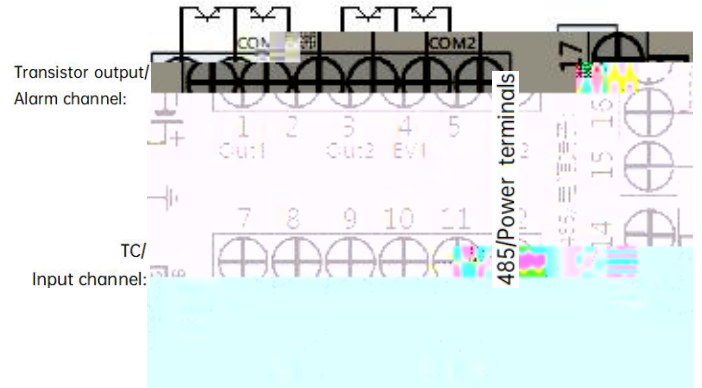

MDT-02R-R:

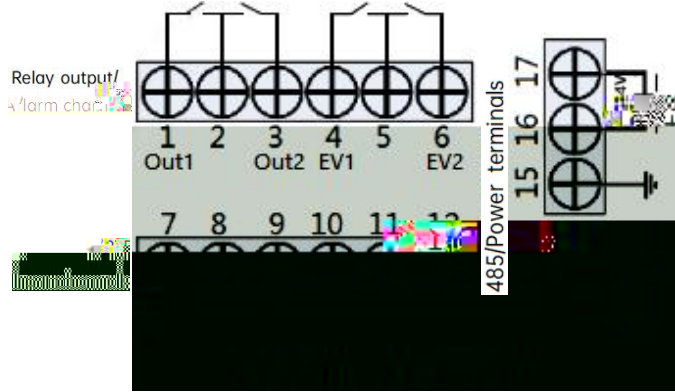

6. Electrical Specification

6.1 Power-supply Specification


6.2 Performance Specification


MDT-02T-R:

